 


LED Festoon Lights

► Festoon Dimmer

User Manual

Package Contains

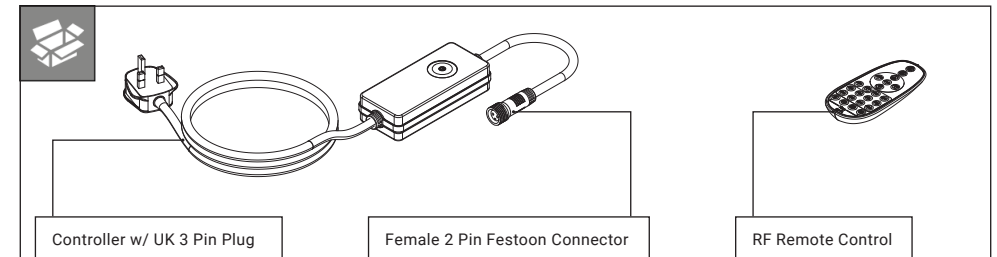

Precautions

Installation Notes

- ▶ This product must be installed by a suitably competent person.
- ▶ May contain small parts, possible choking risk. Keep away from children.

Electrical

- ▶ Switch the power off at the mains supply before installing or maintaining this fitting.
- ▶ Ensure others cannot restore the electrical power supply without your knowledge.
- ▶ Do not interconnect parts with another manufacturer's parts.
- ▶ Do not install if the product has visible damage.
- ▶ Do not modify or disassemble the product beyond instructions or the warrant will be void.
- ▶ Only use with a socket suitable for outdoor use.
- ▶ No user serviceable parts.
- ▶ Do not exceed a maximum connected string length of 100m.

Mechanical

- ▶ Do not use worn or damaged wires or fixtures.
- ▶ Ensure the wire does not cause a trip or fall hazard.
- ▶ Check for damage or defects before connecting to electricity supply.
- ▶ Check for damage before every use.
- ▶ This product must not be modified. Any modifications will invalidate the warranty and may render the product unsafe.
- ▶ Power on using the 'ON' key on the remote control or the power button on the controller unit.

Environmental

- ▶ Wipe clean with a soft dry cloth.
- ▶ Components are made from rubber and plastic and can be used outdoors within a protective enclosure.
- ▶ Not suitable for permanent installation.
- ▶ Store in a clean dry area.
- ▶ Assemble in dry conditions.
- ▶ This product cannot be submerged in water.
- ▶ IP44: Product will be protected from solid particles greater than 1mm in size and from low velocity water spray from any direction.
- ▶ Remote control is not waterproof.

 
Product Warranty

1. A warranty period is provided for products in normal use. For any faults arising during the period that are confirmed to be quality related by inspection by the company, a product of the same specification will be replaced for free.
2. The warranty does not cover any of the following:
 - (1) Any product damage due to usage not allowed in the instructions.
 - (2) Any product damage due to disassembling or wrong operation by the user.
 - (3) Severe appearance damage or deformation of the product.

IMPORTANT

- ▶ Please read prior to installation.
- ▶ Please read these instructions carefully before commencing any work.
- ▶ Please retain these instructions for future reference.
- ▶ Only use with Tagra Festoon Strings & Tagra Lamps.


Diagram

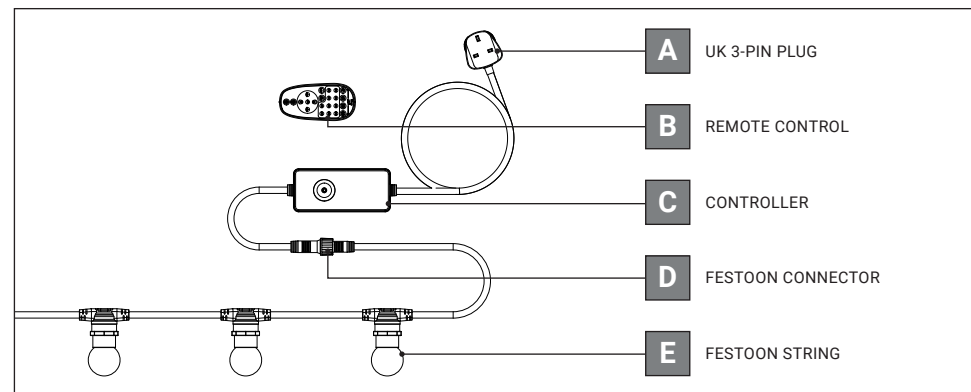

Assembly Instructions

1. Completely unpack the product, check for damage or defects before connecting to electricity supply.
2. Assemble in dry conditions. Only to be used with a socket suitable for outdoor use.
3. Connect the festoon controller (C) with the festoon string (E) using connector (D).
4. Insert plug (A) into a socket suitable for outdoor use and turn on.
5. Insert 2x AAA batteries (not included) into the remote (B). Then press the 'ON' button.
6. Product is now ready to be used.

 Remote Control

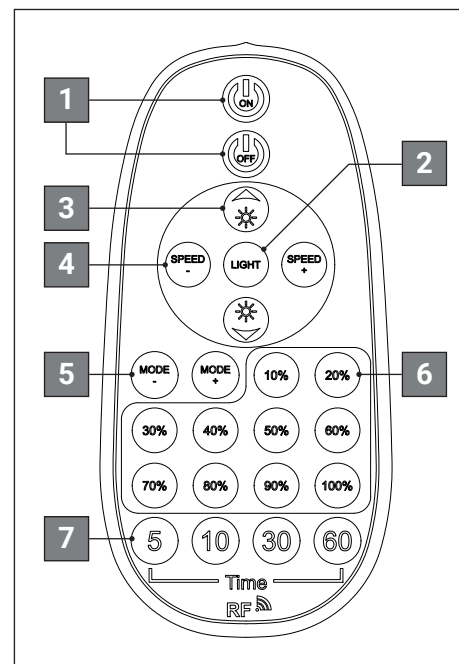

1. **Turn ON/OFF**
Press 'ON' key to turn on or press 'OFF' key to turn off.
2. **Light**
Press to select a constant 100% brightness.
3. **Brightness**
Press the two sun keys to adjust the colour brightness.
4. **Dynamic Mode Speed**
Press 'SPEED+' and 'SPEED-' to set the running speed of the dynamic modes.
5. **Dynamic Mode**
Press 'MODE+' and 'MODE-' to choose one of the 4 dynamic modes. 1. Wave, 2. Flash, 3. Strobe, 4. Breath.
6. **Brightness**
Press to select the brightness level.
7. **Delay Shutdown**
Press to select shutdown delay time. Choose between 5, 10, 30 or 60 minutes.